

# **Cleaning the MAXIM™**

**By following the few small tips below you can keep your Pull Tab Machine in great working order for years to come:**

## **Cleaning the Outside**

**The Maxim™ may be cleaned with any household, NON-ABRASIVE cleaning product.**

**PLEASE DO NOT SET DRINKS ON TOP OF MACHINE.**

## **Cleaning the Inside**

**Paper dust is created as tickets are vended through the ticket modules. This dust can be removed periodically (depending on the amount of play) with a small portable vacuum cleaner or small can of air purchased @ office supply store. In the event of extreme accumulation, it may be necessary to remove the ticket modules for a more thorough cleaning.**

## **Every 3-4 Months:**

**With the tickets removed from the modules, using a small piece of scouring pad (Scotch-Brite), rough up the belt to better grab tickets.**

**Use DENATURED ALCOHOL (NOT REGULAR ALCOHOL) to wipe on belts. Regular alcohol will dry belt and make it brittle and break.**

**IMPORTANT: Bin Timing: do not change the bin timing. It has been preset for Arizona Lottery Tickets.**

**Technical Support: 1.800.377.7554**